

## LOGS-60 MODELS: MEZZO1600

• *Installation Instructions* •



Leave this manual with party responsible for use and operation.

**CAUTION! Risk of Cuts or Abrasions.** Wear protective gloves and safety glasses during installation.

**CAUTION:** Logs are fragile, handle with care.

**Kit Components:**

- Burner Port Fixture
- Ceramic Logs (8)
- Shoulder Screws (11)
- Self-Tapping Screws (13)

**INSTALLATION**

1. Remove decorative front.
2. Remove fixed glass assembly by unlatching the four top spring latches. Allow the fixed glass assembly to tilt away from the fireplace and lift the fixed glass assembly up and out of the opening.
3. Lift burner rails out of appliance.
4. Remove any existing media from appliance.
5. Install eleven shoulder screws into pilot holes in media tray. Locations are indicated in Figure 1.
6. There are twelve burner port holes that must be plugged in order to prevent sooting. There are in two groups of six holes. A burner port fixture will be installed on top of the designated port holes. See Figure 1 for location.
7. Locate the slot on the rock tray and align the burner port fixture over the pilot hole.
8. Place burner port fixture over pilot hole and secure using a self-tapping screw.

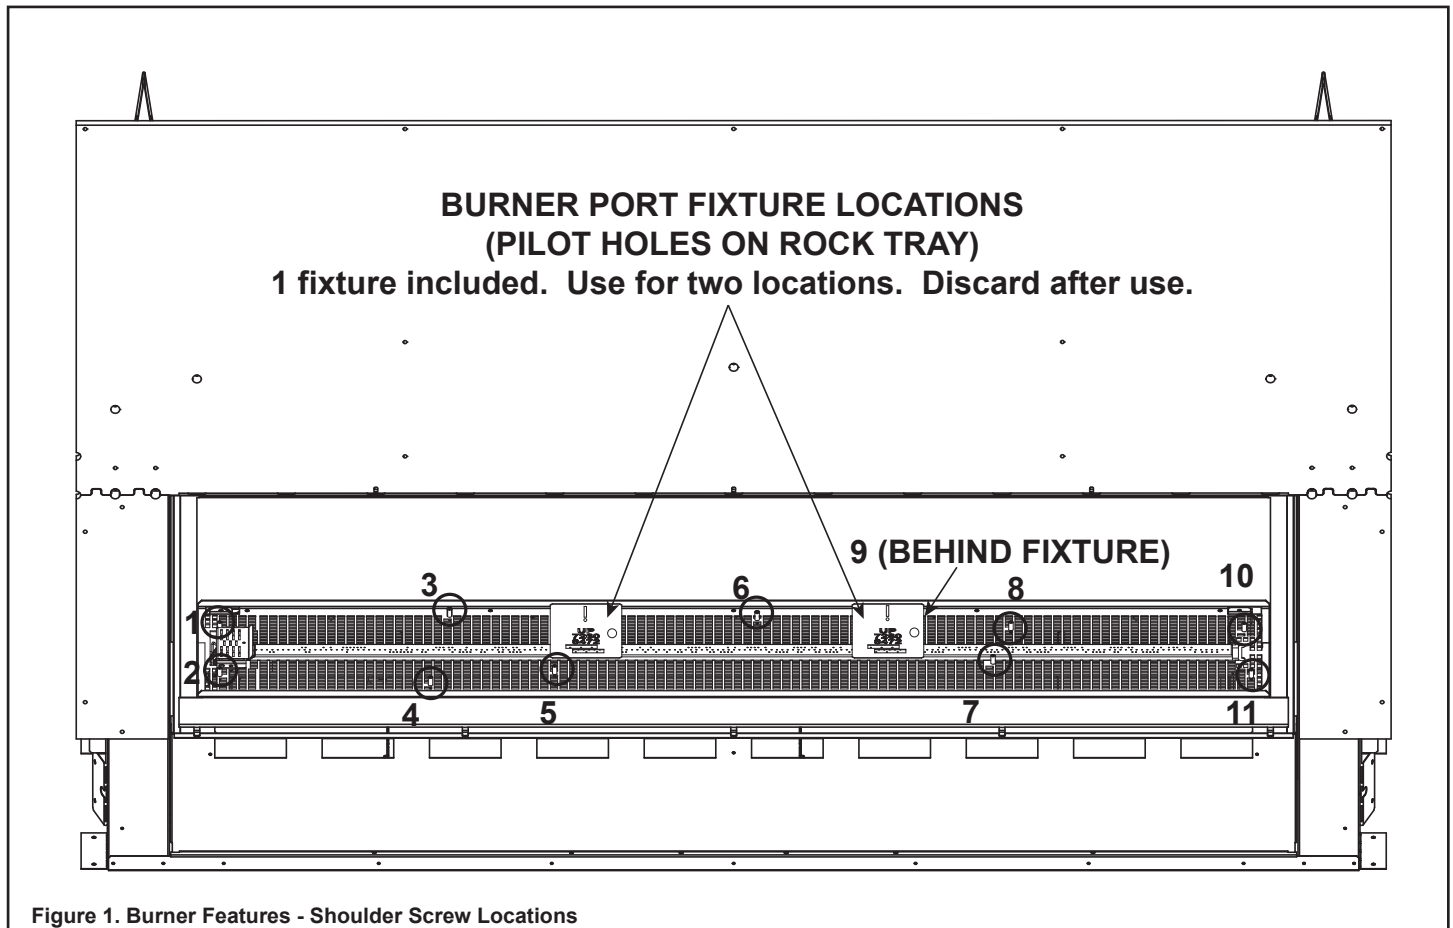


Figure 1. Burner Features - Shoulder Screw Locations

9. Insert six self-tapping screws into the 6 burner ports that lie within the burner port fixture rectangle holes. See Figure 3. Move the burner port fixture to the second location and repeat the process.

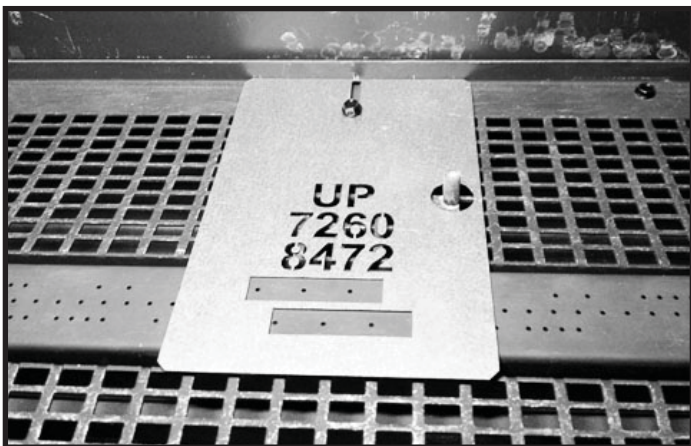


Figure 3. Insert Screws into Burner Ports

10. Remove burner port fixture. Discard. Reinstall burner rails.

**NOTICE:** Remove burner port fixture prior to appliance operation. If not removed, undesirable flame appearance and sooting will occur.

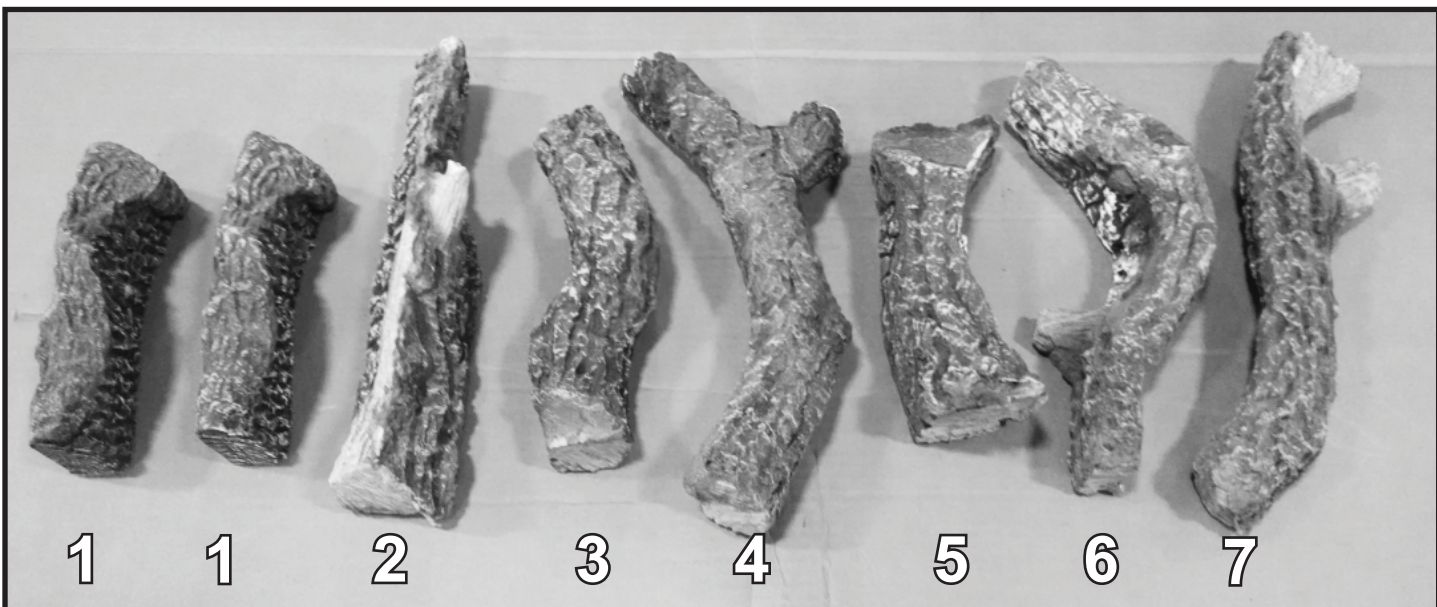


Figure 4. Logs identified

11. Unpackage logs and identify each log using Figure 4.
12. **LOG #1 (SRV2300-703), QTY 2:** Install Log # 1. Place log so that the shoulder screws fit into the holes on the bottom of the log and the logs contact the firebox sides. Repeat for both ends of the media tray. See Figure 6.

**Note:** Log #1, Logs #3-7 and Log #9 have holes located on the bottom that are used for placement on corresponding shoulder screws. See Figure 5.

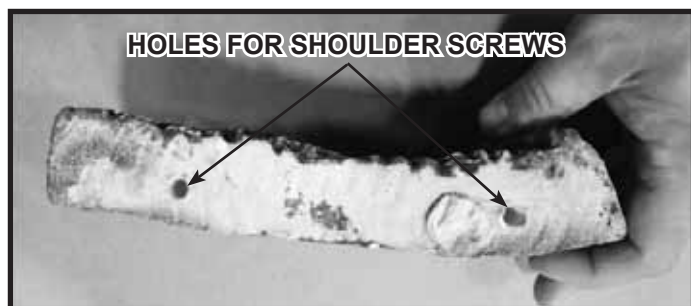


Figure 5. Log Placement Holes



Figure 6. Log #1 (SRV2300-703) Left and Right Side Placement

13. **LOG #2 (SRV2300-704):** Install Log # 2. Place log so that the larger end of the log is in contact with the locating screw and the small end of the log is resting on the end of Log #1. See Figure 7.

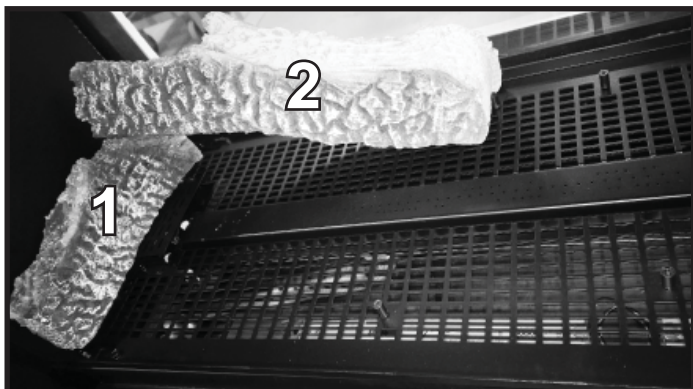


Figure 7. Log #2 (SRV2300-704)

14. **LOG #3 (2331-708):** Install Log # 3. Install log onto shoulder screws #4 and #5 by lining up shoulder screws with holes in bottom of log. See Figure 8.

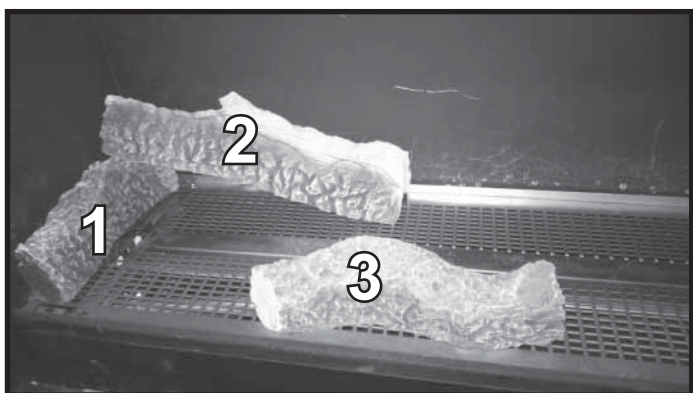


Figure 8. Log #3 (SRV2331-708)

15. **LOG #4 (SRV2331-706):** Install Log # 4 onto shoulder screw #6 by lining up shoulder screw with hole in bottom of log. The other end of the log should rest on the end of Log #3. See Figure 9.

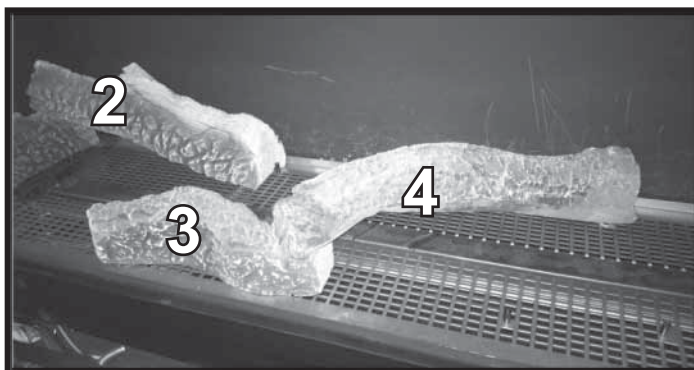


Figure 9. Log #4 (SRV2331-706)

16. **LOG #5 (SRV2331-704):** Install Log #5 onto shoulder screws #8 and #9 by lining up the holes in the bottom of the log with the shoulder screws as shown in Figure 10. Note that the properly placed log does not cover any part of the burner. If burner is covered, log is installed backwards and burner rails can not be installed properly. Turn log around to its proper position.

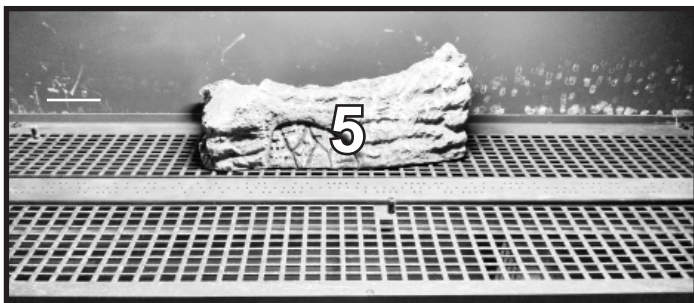


Figure 10. Log #5 (SRV2331-704)

17. **LOG #6 (SRV2331-703):** Install Log # 6. Place log so that the larger end without the fork is resting on the flat area on Log #5. The opposite end should be placed so that it contact the edge of the media tray. When properly placed, this log is firm in its position. If it seems to simply “balance” rather than rest, continue to adjust it. Log #6 should not contact the inside back of the appliance on a single-sided model, or the glass on a see through model). See Figure 11.

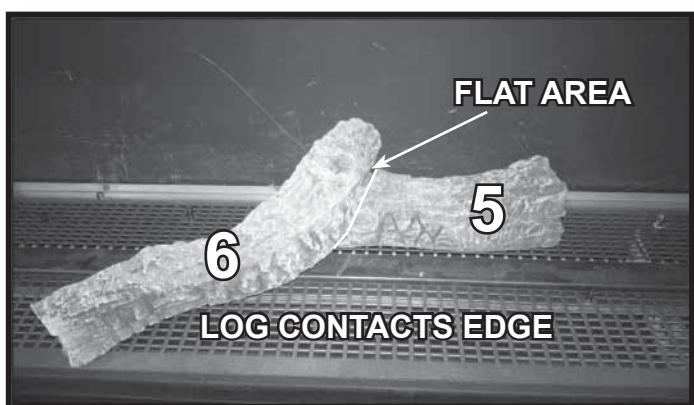


Figure 11. Log #5 (SRV2331-704 and Log #6 (2331-703)

18. **LOG #7 (SRV2300-708):** Install Log # 7. Place log so that the forked end is facing the firebox opening and the left limb is in contact with the locating screw. The other end of the log will rest on the Log #1 already placed on the right side and should be as far forward as possible without interfering with glass installation.



Figure 12. Log #7 (SRV2300-708)



Figure 13. Log Set Installed

18. Place media on media tray according to instructions included with media kit. Once the logs are installed, there will not be room for all of the media originally installed. The amount used should decrease by approximately five pounds (1 bag).

19. Replace fixed glass assembly and decorative front on appliance.

**NOTICE:** Do not reinstall all glass media. Decrease amount used by five pounds (1 bag).

**⚠ WARNING**



**Delayed Ignition Risk**

- Place media according to instructions.
- Do NOT place media in area in front of pilot.
- Do NOT place media in a position that they may fall into area in front of pilot.
- Do NOT use any media other than the media supplied with the appliance.
- Do NOT use more than the amount shipped with the appliance.

Fireplace will not function properly.  
Delayed ignition may occur.

Please contact your Hearth & Home Technologies dealer with any questions or concerns.  
For the location of your nearest Hearth & Home Technologies dealer,  
please visit [www.hearthnhome.com](http://www.hearthnhome.com).

Hearth & Home Technologies  
7571 215th Street West, Lakeville, MN 55044  
[www.hearthnhome.com](http://www.hearthnhome.com)